



ASSEMBLY INSTRUCTIONS

UNITE

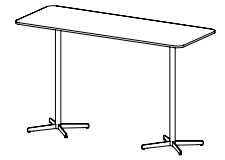

UNITE M4 HIGH

COMPONENTS



1 x Tabletop



2 x Plate



1 x Beam



2 x Bolt




2 x Inner leg




2 x Outer leg



9 x Screw



2 x Lower foot



2 x Upper foot



2 x Washer



6 x Countersunk screw




8 x Adjustable feet M6

Required tools: hex key, crosshead screwdriver, adjustable spanner, adjustable pliers.


1

Carefully slide the Lower foot into the inner leg. Then carefully slide the upper leg into the inner leg. The upper foot fits into the lower foot.

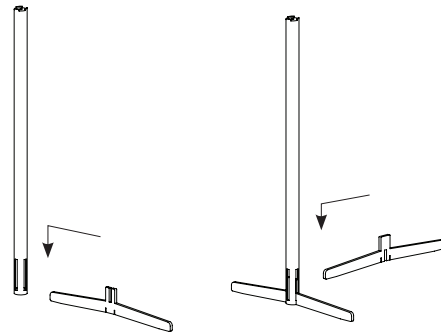


2

Slide the outer leg over the inner leg. Secure using an adjustable spanner and 1 x Bolt + 1 x Washer. Tighten the bolt so there is no movement in the foot! **Much force is needed!**

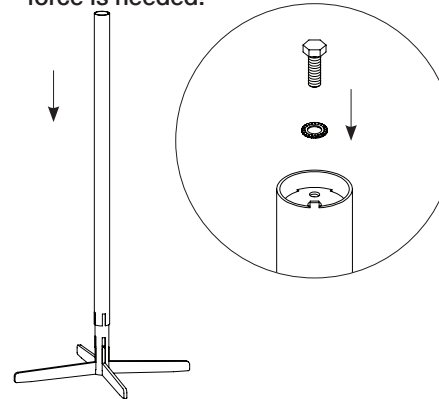


3

Attach the mounting plate using a hex key and 3 x Countersunk screw. The small part sticking out on the outer leg matches with a hole in the Plate.

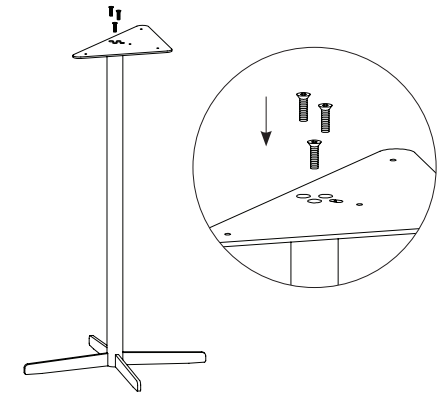


4

Repeat step 1 till 3 to assemble the other leg. Put the tabletop on a protective cover and put both legs on the tabletop. Do not screw the legs to the tabletop.

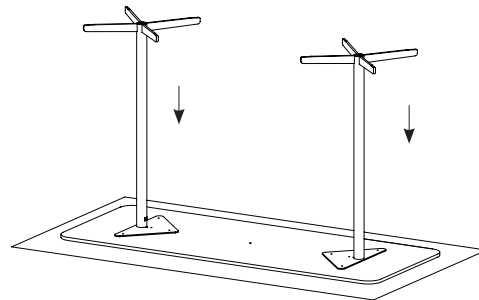


5

Carefully insert the beam into the legs. Use 9 x Screw to attach the legs and the beam to the tabletop.

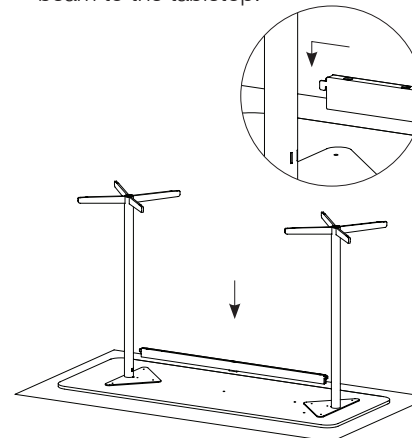


6

Attach the 8 adjustable feet and gently turn the table upside down. Use adjustable pliers if necessary.

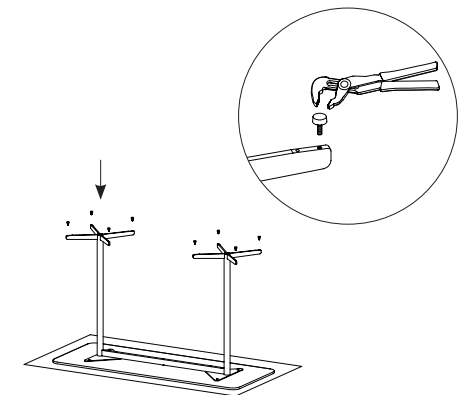


MONTERINGSANVISNINGAR

UNITE

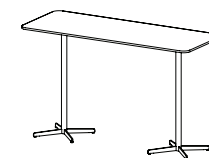

UNITE M4 HIGH


KOMPONENTER



1 x Bordsskiva



2 x Monteringsplattan



1 x Balk



2 x Bult




2 x Inre ben




2 x Yttre ben



9 x Skruv



2 x Nedre fot



2 x Övre fot



2 x Låsbricka




6 x Försänkt skruv




8 x Ställfot M6

Verktyg för montering: insexnyckel, stjärnskruvmejsel, skiftnyckel, polygrip.


1 Placera försiktigt den nedre foten i det inre benet. Placera sen försiktigt den övre foten i det inre benet. Den övre foten passas in genom den nedre

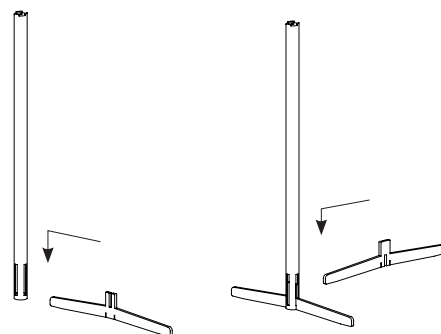


4 Repetera steg 1 till 3 för att montera det andra benet. Lägg bordsskivan upp och ner på ett skyddande underlag och placera benen på bordsskivan. Fäst ej benen.

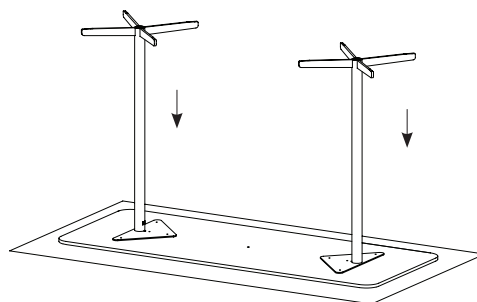


2 Placera försiktigt det yttre benet över det inre benet. Drag åt bulten så det inte är någon rörelse i foten, **mycket kraft behövs!**

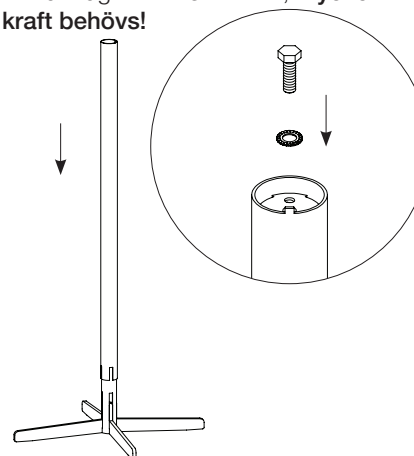

5 Placera försiktigt balken i uttagen i benen. Fäst balken och benen med 9 x skruv. Använd en stjärnskruvmejsel.

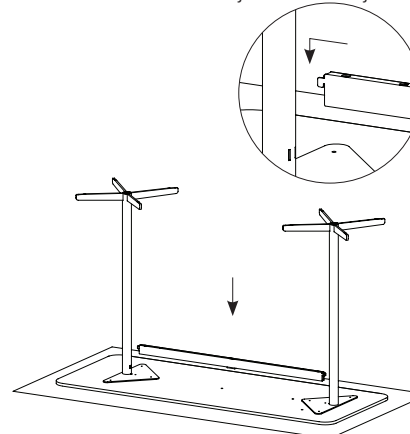

3 Fäst monteringsplattan med 3 x försänkt skruv. Använd en insexnyckel. Den utstickande delen på det yttre benet passas in i ett hål i monteringsplattan.

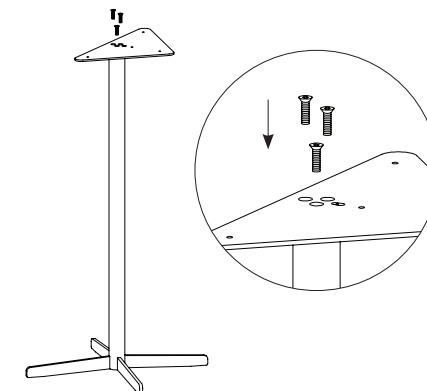

6 Fäst de 8 ställfötterna och vänd försiktigt på bordet. Använd polygrip om det behövs.

